


# KLOPFENSTEIN / SPECTRUM WATERCOLOR ARM (EA102) USER GUIDE

## Watercolor Arm Accessory

The Watercolor Arm attaches to the center upright of any Klopfenstein or Spectrum easel. In the instructions below it's shown attached to our Spectrum Studio Easel (SS100).

Watercolor Arm Bracket Assembly attaches to the easel upright.

Adjust the length of the arm to support your canvas, and lock it in place with the plastic T-knob

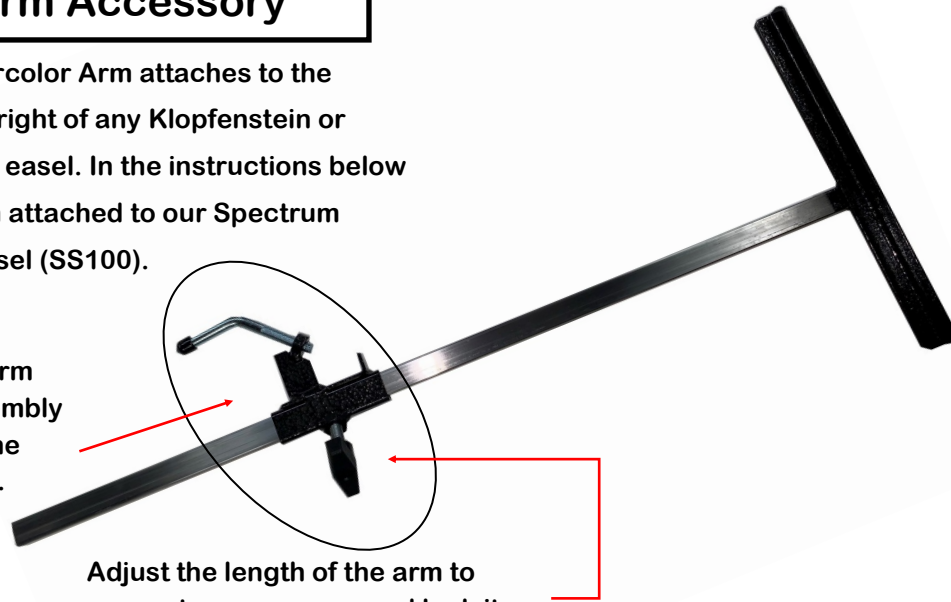

- (1) Raise the **canvas tray** up out of the way to make room to attach the Watercolor Arm to the upright at a convenient height. (See Fig. 1)
- (2) Mount the Watercolor Arm Bracket to the Front Upright and tighten the **Lever Handle** (See Fig. 1)
- (3) Loosen the Plastic T-knob on the Watercolor Arm Bracket and slide the arm into the bracket. (See Fig. 2)
- (4) Slide the canvas tray back down against the top of the Watercolor Arm Bracket and tighten the canvas down. Lay one end of your canvas or drawing board on the canvas tray, adjust the length of the Watercolor Arm to support the opposite end of your canvas and tighten plastic adjustment knob. (See Fig. 3)

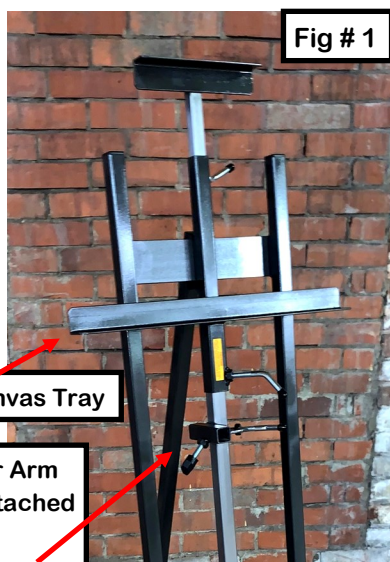


Fig # 1



Fig # 2



Fig # 3

Need Help? Call us at (419) 884-2900 with questions or comments.

**KLOPFENSTEIN / SPECTRUM "WATERCOLOR ARM" USER GUIDE CONT.**



**Collegiate Easel (CE100)**



**Pro Easel (PE100)**



**Spectrum Studio (SS100)**

**Need Help? Call us at (419) 884-2900 with questions or comments.**