

KLOPFENSTEIN "EASEL TRAY ACCESSORY" (ET101) & (ET102) USER GUIDE

Our "Easel Tray" ET101 (4x20") & ET102 (8x20") instantly attaches to the center upright of any Klopfenstein / Spectrum Easel to keep your drawing & painting supplies mere inches from your work.

Tighten steel lever handle to clamp Easel Tray Bracket to the center upright of your easel.



Easel Tray Bracket attaches to the center upright of any Klopfenstein / Spectrum easel. (See illustrations below)

- (1) The Easel Tray Bracket is designed to clamp on to the center upright bar of your Klopfenstein or Spectrum easel. **It will clamp to square or round bars.**
- (2) Loosen the steel lever handle enough for the tray bracket to fit over the center upright bar of your easel. Position the tray at a convenient height below the canvas tray and tighten the lever handle to lock the Accessory Tray onto the center upright (see below)

Attach Accessory Tray below the canvas tray.



8" x 20" (ET102)



4" x 20" (ET101)

Need Help? Call us at (419) 884-2900 with questions or comments.