
Safely Using The Klopfenstein-Built Spectrum Studio Easel (SS100)

CAUTION: Klopfenstein painting and drawing equipment is made from all welded, heavy gage steel tubing to provide exceptional durability and rigid stability for studio work. Our equipment is heavier then similar sized wood equipment and you must therefore take care to hold & control the telescoping & sliding parts of our equipment securely when making adjustments. *Failure to control these parts could cause personal injury and / or damage to your equipment.*

ATTN: ART PROFESSIONALS & STUDENTS Prevent personal injury. Carefully read and follow all safety procedures shown in this guide for safely working with this equipment.

ANATOMY OF AN SS100

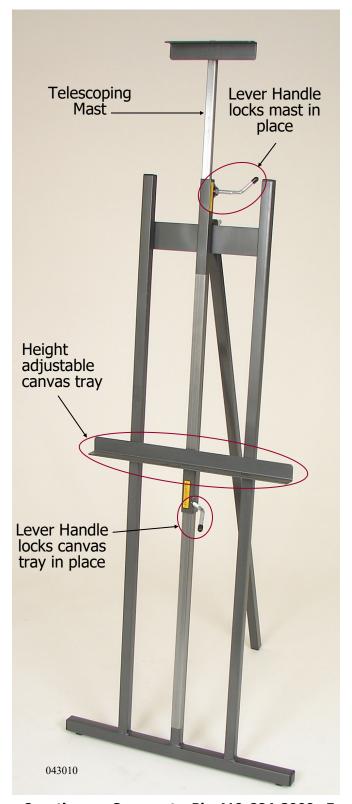

SAFELY ADJUSTING MAST HEIGHT

1) Hold the *telescoping* section of the mast **before** loosening the lever handle.

2) Holding the mast with one hand, loosen the lever handle, adjust the mast height and re-tighten the lever handle.

<u>ALWAYS:</u> lower the mast to its resting position at the end of each painting / drawing session.

ALWAYS: support the mast with one hand **before** making any height adjustments.

<u>ALWAYS:</u> re-tighten the lever handle(s) after **every** easel adjustment.




SAFELY ADJUSTING CANVAS TRAY HEIGHT

1) Support the Canvas Tray *before* loosening the tray lever handle.

2) Holding the canvas tray with one hand, loosen the tray lever handle, adjust the tray height and re-tighten the tray lever handle.

ALWAYS: support the Canvas Tray with one hand **before** making any height adjustments.

<u>ALWAYS:</u> re-tighten the lever handle(s) after **every** easel adjustment.

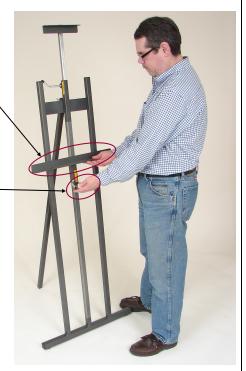

Questions or Comments: Ph: 419-884-2900 • Email: emily@klopfensteinart.com • Website: klopfensteinart.com

ATTN: ART PROFESSIONALS & STUDENTS Prevent personal injury. Carefully read and follow all safety procedures shown in this guide for safely working with this equipment.

SAFELY USING THE KLOPFENSTEIN-BUILT STUDIO EASEL (SS100)

NOTICE:

To keep your Klopfenstein Equipment in proper working order, we recommend all unpainted uprights and extensions be wiped down

with a rag or paper towel sprayed with a light oil (like WD40 lubricant) on a monthly bases, or as needed. This is the only maintenance that should be required.