


## SPECTRUM TABORET (ST100) ASSEMBLY INSTRUCTIONS

Remove all plastic wrap. You will find your assembly parts either packed in the same carton as your taboret, or, if your order was for a large quantity of taborets your assembly parts will be packed in bulk in a separate carton. For each taboret you should have: **2 threaded steel lever handles and 4 casters.** To assemble your taboret you will need: a **1/2"** and a **9/16"** wrench or, an adjustable crescent wrench.

- 1.) Screw the casters into the underside of the "H" frame base and tighten **securely** with a wrench.
- 2.) Insert one end of upright (the unpainted 1" square tube) into the base socket and tighten the lock bolt **securely** with wrench.
- 3.) Thread the steel lever handles into the welded nut underneath the steel shelf frames. Slide each of the two steel shelf frames over the upright and drop the Masonite shelf panel into each frame. **Hand** tighten the steel lever handles to lock your shelves at a convenient height.

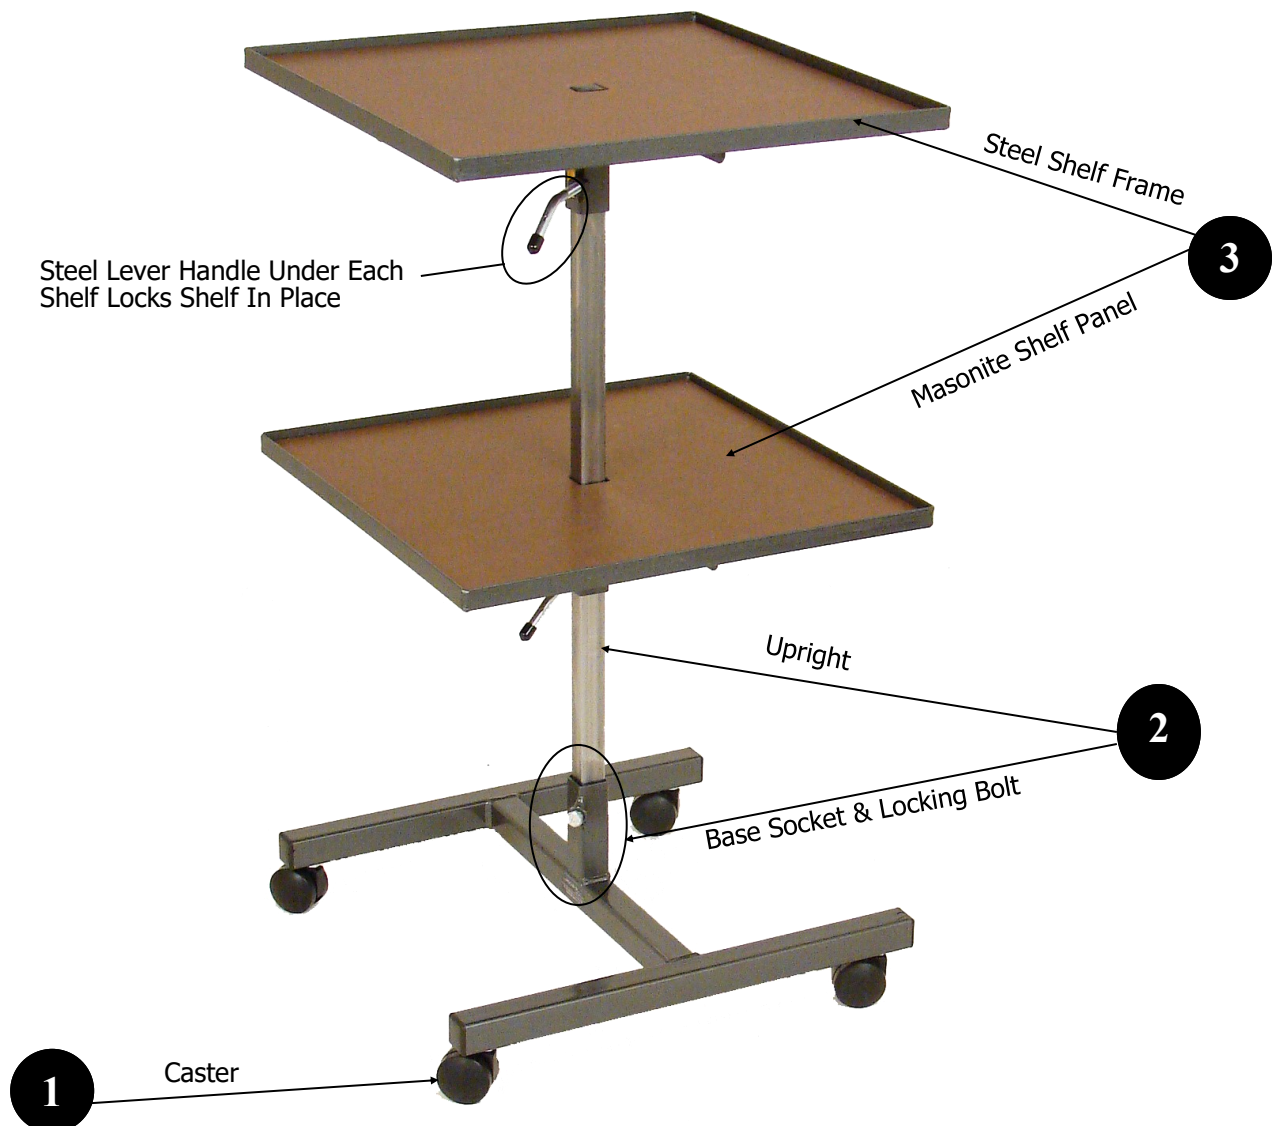

Need Help? Call us at 419-884-2900 with questions or comments.